


## Installation On Counter Top

1

COUNTER MOUNTING PATTERN

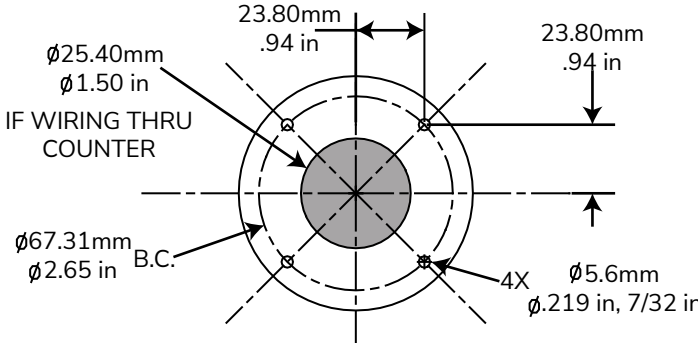

IF WIRING THRU COUNTER

23.80mm .94 in


23.80mm .94 in

25.40mm 1.0 in

67.31mm 2.65 in B.C.

4X 5.6mm .219 in, 7/32 in

14 X 1 1/2" SHEET METAL SCREWS

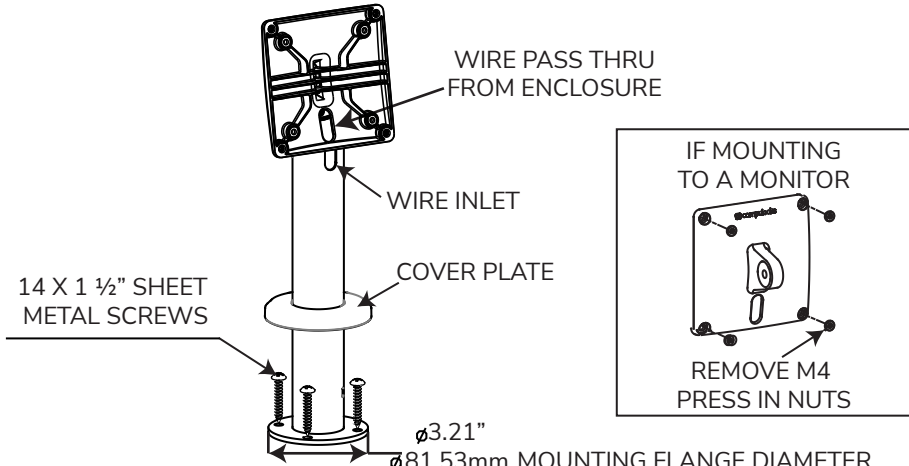


WIRE PASS THRU FROM ENCLOSURE

WIRE INLET

COVER PLATE


3.21" 81.53mm MOUNTING FLANGE DIAMETER

IF MOUNTING TO A MONITOR

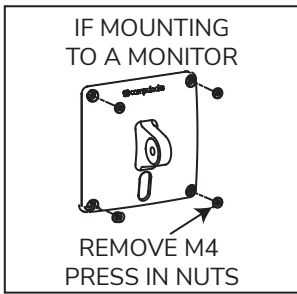


REMOVE M4 PRESS IN NUTS

2

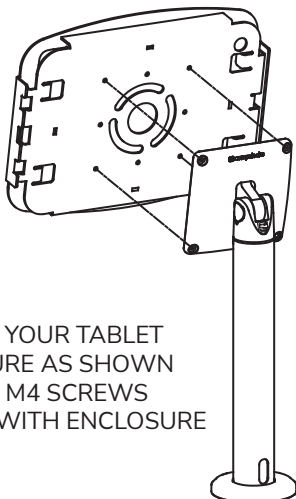

INSTALL YOUR TABLET ENCLOSURE AS SHOWN USING M4 SCREWS PROVIDED WITH ENCLOSURE


3

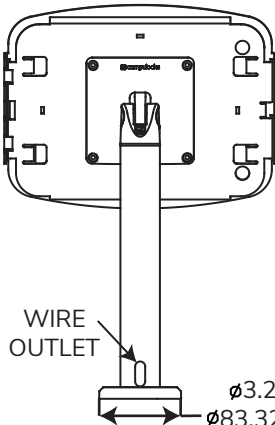

WIRE OUTLET


3.28" 83.32mm COVER DIAMETER

4

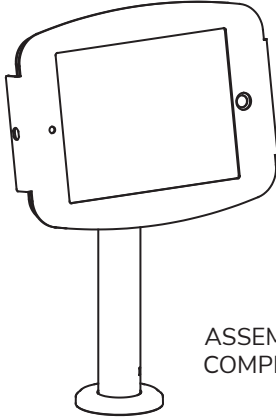


ASSEMBLY COMPLETE

IN THE BOX

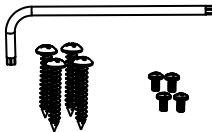


Hardware Kit




Fixed Pole Stand


ACCESSORIES



Adhesive Base



Single Add On Bracket



Free Standing Base



©Compulocks Brands Inc. All Rights Reserved.

www.compulocks.com | online@maclocks.com | +1 800-948-0344


Sheet 1 of 2

# Installation Below Counter


1

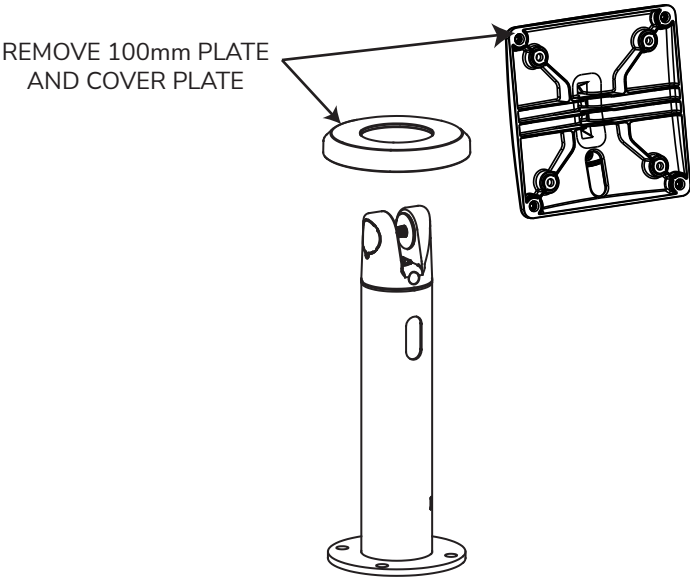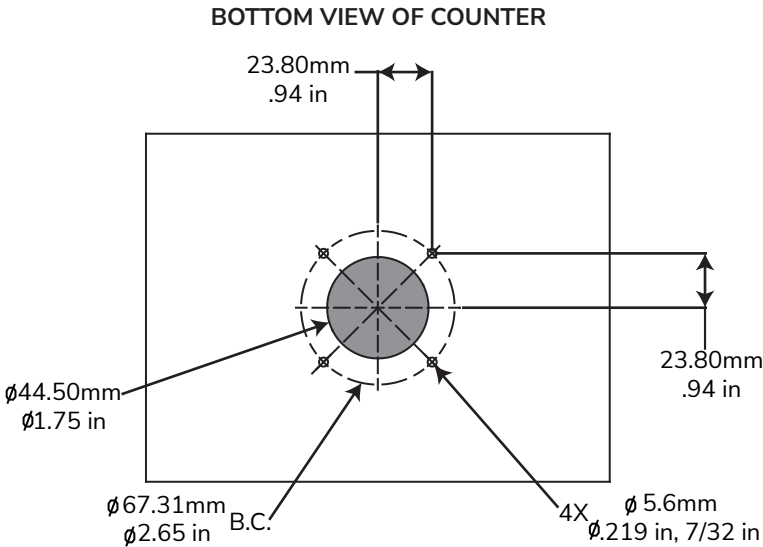

2

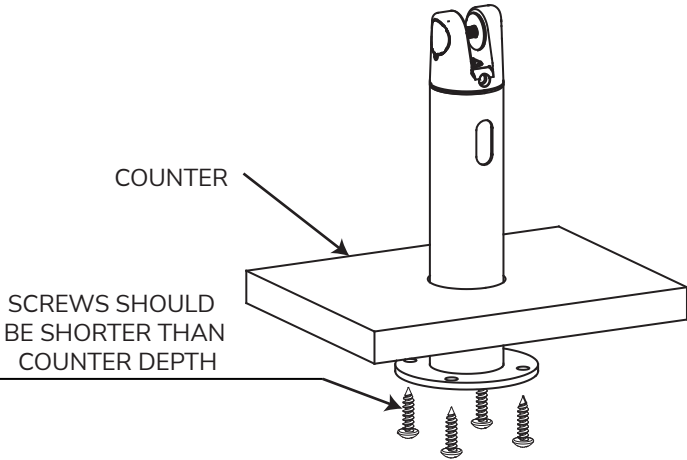


3

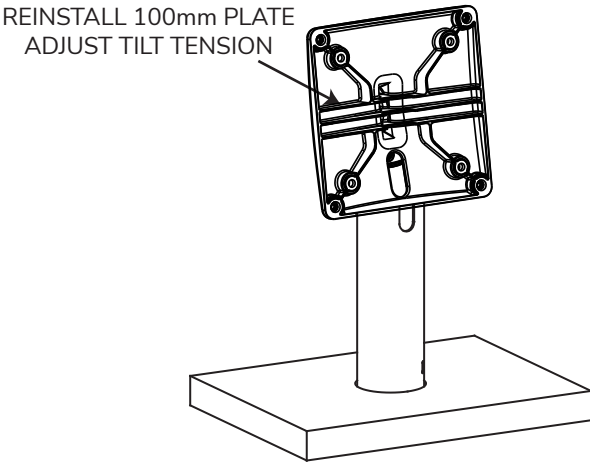


1

FOLLOW STAND  
MOUNTING  
INSTRUCTIONS


or

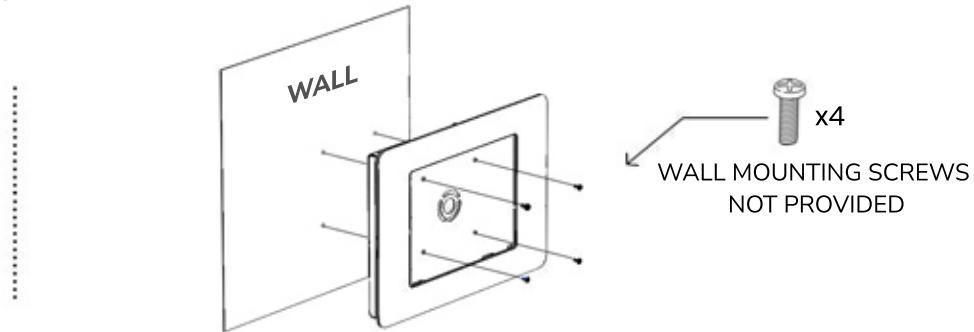


2

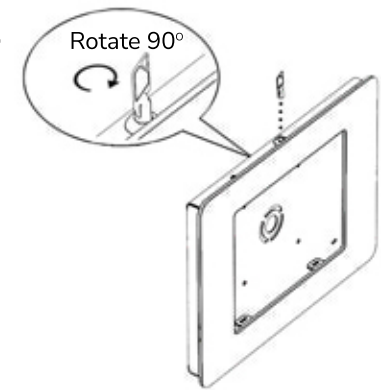

3

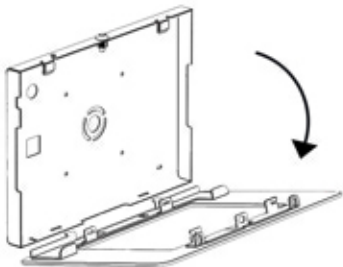


4

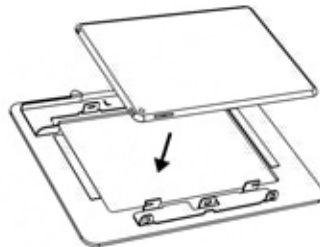


5




6

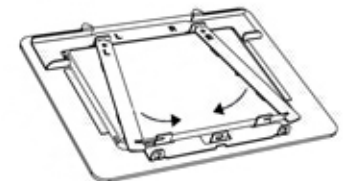


7

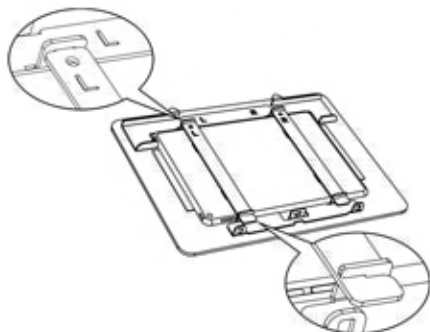

8

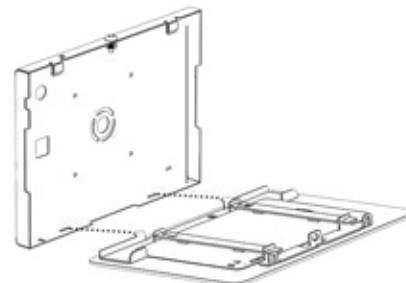

9

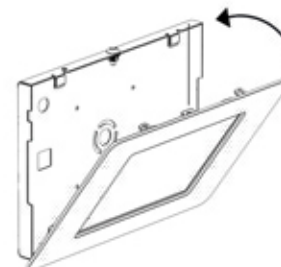

10

